

Notes:

A. All wiring and connections should be completed by licensed electricians, in compliance with Local and State Code.

- B. Input power to controllers to be 120 or 240VAC (matched to motor), 2 Conductor + ground cable (12 AWG max).
- C. Output power to motors to be 120 or 240VAC as per input power, 3 Conductor + ground cable (12 AWG max).
- D. IMPORTANT!! Exact motor wiring, specifically termination of RED and BLACK wires, depends on motor mounting configuration (i.e. left or right hand motor). When a combination of configurations is used, UP/DOWN wire may need to be swapped for individual motor outputs to function correctly with grouped switches. Wiring should be verified using the onboard buttons. All motors should operate in the same direction when operated from the onboard buttons.

Operating Modes Contact Closure / Switch Functionality

	Standard Mode	Stops/Venetian Mode	
Тар	Move to Extent (Open / Close) Tap both contacts simultaneously to stop shade movement	Operate motor for programmed stop time	
Hold (>2s)	Move while held (release to stop)	Move to Extent (Open / Close)	

An optional Single Contact Stop feature allows a tap in the direction of motion to stop the motor in its current position.

@mbedia

27 - 112 Freeport Cres NE Calgary, AB T3J 0S9 Canada P# +1 403 456 6279

TITLE

EM4 General Wiring Diagram

Drawing Status:

ISSUED FOR DELIVERY

Onboard Button Operation				
JP / DOWN	Operate ALL Motors NOTE: holding both for >10s will reverse polarity of the master input (N/O ◆N/C)			
UNCTION	Change Operating Mode Standard ←→ Stops/Venetian			

Increase/Decrease Stop Time in Stops/Venetian Mode (0.1s increments)

	LED Operation		
INPUT		Blink: Switch Press Detected Off: Master input is in NO mode On: Master input is in NC mode	
	MODE	Off: Standard Mode On: Stops/Venetian Mode	
STOP TIME (Single Contact Stop)		Off: Standard 2-Button Stop On: Single Contact Stop enabled Blink: Stop Time + 10s for each long blink (2.5s) + 1s for each medium blink (1s) + 0.1s for each short blink	

OVERRIDE On: Master Override Active Other inputs will be ignored until Master is released Off: All Inputs Operational

Drawing Status

drawn by:

drawn by

issued

rev#

drawing no.:	EM4-01		
scale:	NTS		
This drawing is the property of The Embedia Sales Corp. Any copies, reproduction, or distribution to third parties must only be done with formal consent from Embedia Sales Corp.			

co

date: 2022-03-24